

PEN REFILL REPLACEMENT INSTRUCTIONS

Gatsby Twist Pen

- To replace the Gatsby Twist Pen refill purchase a Cross pen refill in black or blue.
- Pull the refill tip cap off and remove the expired refill.
- Drop the refill with the spring into the opening at the clip end.
- Screw the twist mechanism into the tube body until seated properly over the ink refill.
- Twist the cartridge to expose the tip and push the twist cap over the mechanism until it seats against the pen body.
- The pen operates by twisting the cap in either direction to advance or retract the pen tip.

Wall Street II

- To replace the Wall Street II Pen refill purchase a Cross pen refill in black or blue.
- Pull the pen body away from decorative band at nib end.
- Slide spring onto the end of ink refill and insert the spring end into the nib assembly at the nib end.
- Screw the twist mechanism into the nib assembly.
- Slide the open end of the pen body over the twist mechanism and onto the shoulder of the nib assembly until it seats against the decorative ring.
- The pen operates by twisting the body in either direction to extend or retract the pen tip.

Slimline Pen

- To replace the Slimline Pen refill purchase a Parker pen refill in black or blue.
- Pull clip end of body apart at decorative band and remove empty ink cartridge.
- Insert refill and push the two halves together aligning grain as desired.
- Pen is operated by twisting the halves in opposite directions to extend or retract the pen tip.